



Instructions Fuseworks™ In A Floor Kiln

Fuseworks™ 90 COE glass is designed for use in the Fuseworks™ Kiln. Firing instructions are provided on the back of glass packs. For those wishing to fire Fuseworks™ glass in a floor kiln, we recommend the following firing schedule.

Before beginning, please adhere to all warnings and safety instructions contained in the kiln manufacturer's operations manual.

FLOOR KILN INSTRUCTION:

1. Place a kiln washed shelf inside kiln.
2. Place glass on the shelf.
3. Fire the glass.
 - Ramp up 30° F/min to 1000°
 - Soak for 1 minute.
 - Target up full speed to 1470° and hold for 10 minutes.
 - Anneal Soak at 960° for 10 minutes.
 - Turn off kiln and cool down to room temperature leaving the lid closed.
4. Remove glass from kiln when cool. If there is kiln wash on the pendant be sure to remove using Windex® and a toothbrush.