



NO DAYS Glaze™ Setup Instructions

Step # 1:

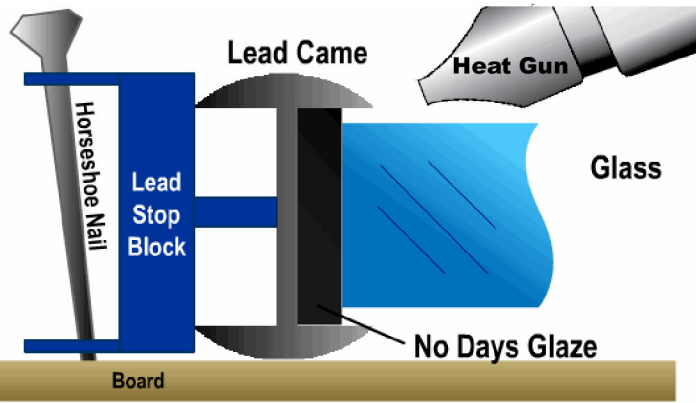


- Insert the No Days Glaze into the came.
- Press glass against the surface of the No Days Glaze

Step # 2:

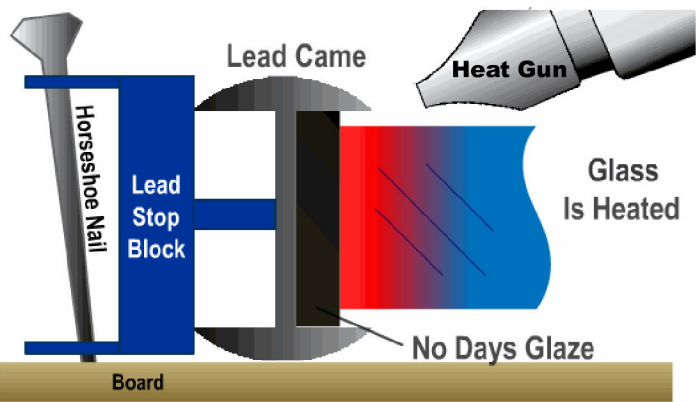

- Heat glass using a heat gun where the glass meets the came.

Step # 3:

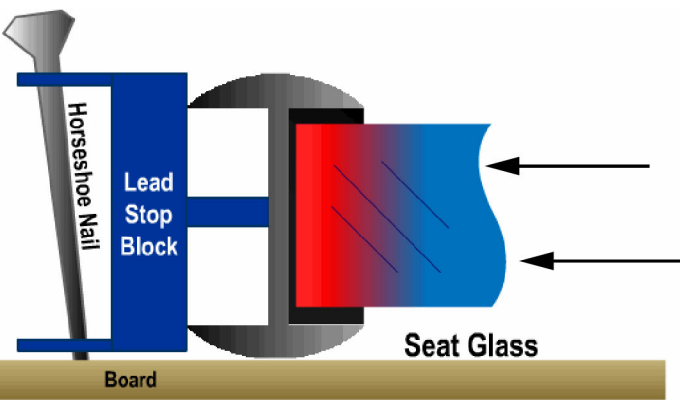

- When the glass is heated, press the glass into the No Days Glaze to allow it to form to all 3 sides of the glass and came surfaces

Step # 4:



- Allow glass to briefly cool while you begin to work on your next piece.