


# StripPro Instructions

1. Position the slide bar onto the Grid Surface using the grid adapters as shown. *see figure 1*
2. Place the StripPro on the two black bushings of the slide bar. Note that the StripPro does not snap onto the bushings, it just rests on them. The StripPro will also work if you just set it on the slide bar without placing it on the black bushings. *see figure 2*
3. Plug the ruler into the Grid Surface with the RED thumb screw positioned on the left side of the ruler. The ruler itself, may be positioned on the right OR left side of the slide bar. *see figure 2*
4. Position one of the grid adapters adjacent to the ruler on the right hand side to stabilize the ruler. The ruler should be at a 90<sup>0</sup> angle to the slide bar. Micro-adjusting may be made by loosening the thumb screw on the ruler and shifting the ruler up or down or by turning the grid adapter 180<sup>0</sup>. *see figure 2*
5. To adjust the height of the blade, so the wheel is perpendicular to the glass, place a small piece of glass underneath the cutting head and loosen the SMALL thumb screw that holds the blade in place. Adjust the StripPro so that it is parallel to the Grid Surface, then retighten the SMALL thumb screw.  
Periodic adjustment may be needed if blade becomes loose. You do not want the cutting head to have a spring action so be sure the SMALL thumb screw is tight. *see figure 3*
6. The StripPro has an adjustable reference setting so you may align it with any point on the ruler. This is accomplished by loosening the LARGE thumb screw on the blade holder. For instance, you could use the 2 inch mark on the ruler as the reference point by lining up the cutting wheel with the 2 inch mark. This would be good for scoring 2 inch strips. Just place the glass on the ruler. With the edge of the glass on the edge of the ruler (zero), the result would be a 2 inch strip. This is just one example. *see figure 4*
7. The StripPro may be used for scoring angles. The angle may be set infinitely by plugging in the extra grid adapter and turning it against the ruler to adjust to the correct angle desired. It will be necessary to move the grid adapter to different squares to achieve different angles. *see figure 5*
8. To score the glass, position it along the ruler, and starting from the top, pull the cutting head toward you.
9. If oil is desired, you may put a small amount in one of the squares and dip the StripPro every 3 or 5 scores, or as needed.


## **Creator's Stained Glass**

25091 W. Crabtree Lane Ingleside, Illinois 60041


Ph. 847.477.3863    [www.cuttersmate.com](http://www.cuttersmate.com)    fax 1-847-740-1870

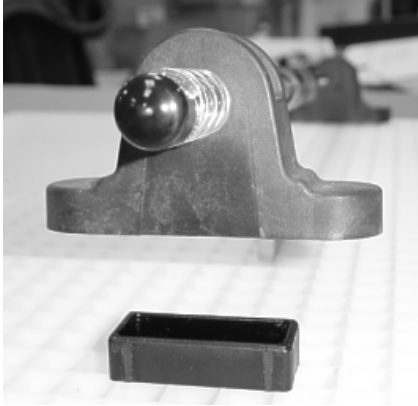


*figure 1*

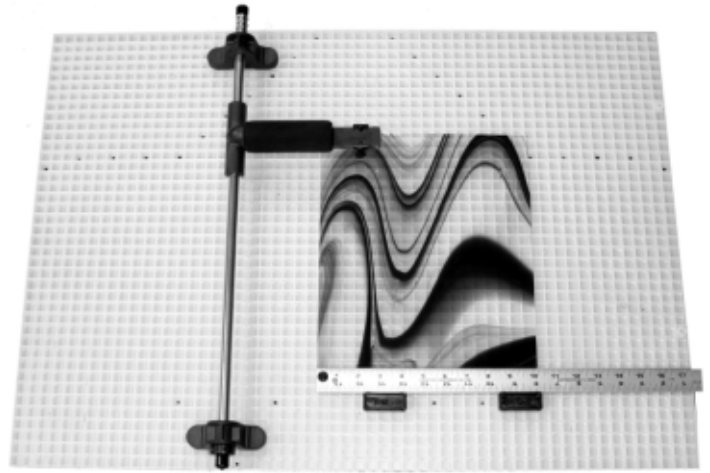


*figure 2*

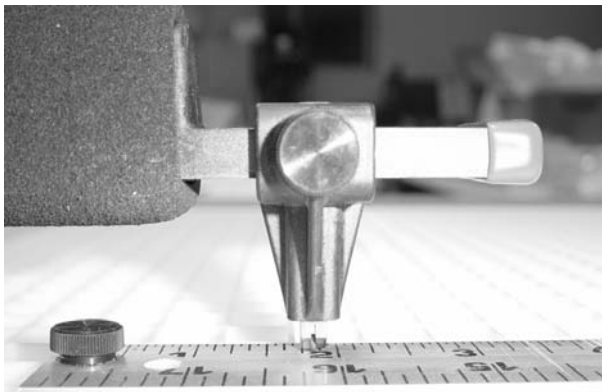

*figure 3*

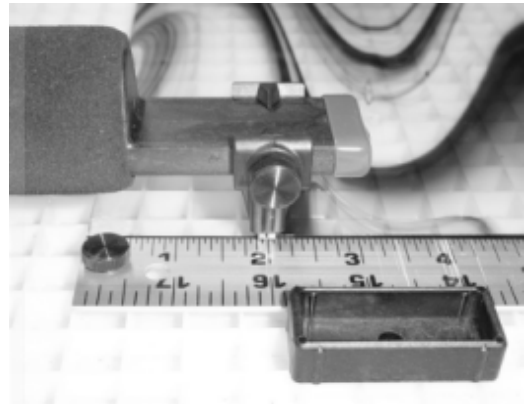

*figure 4*

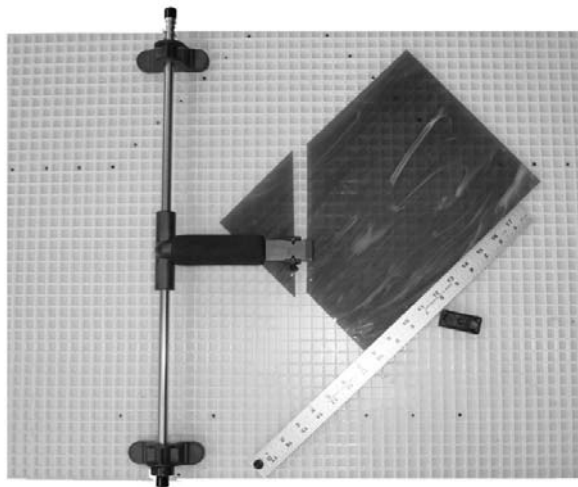

*figure 5*